


PK-DGTL-THC

Installation and operating manual




PK-DGTL-THC Installation and operating manual

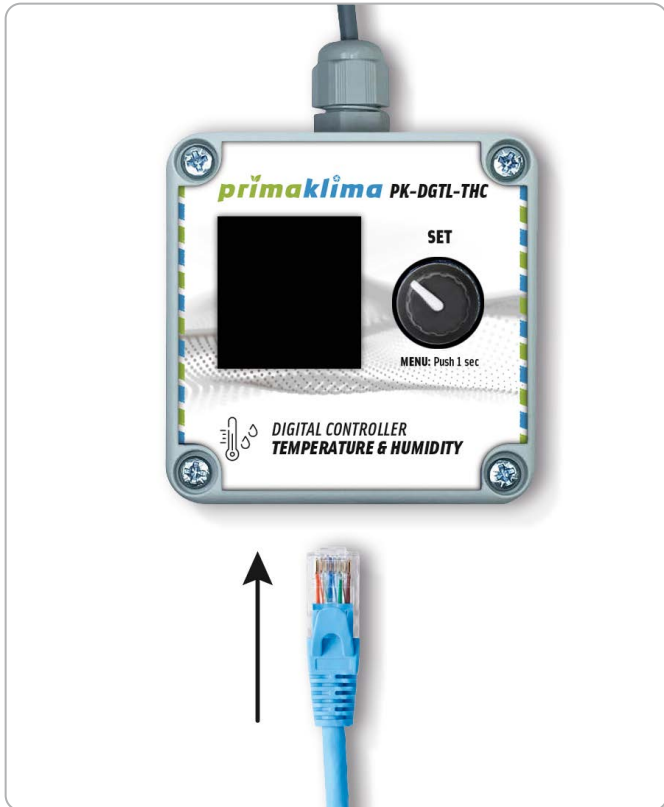



Step 1:

Connect the EC fan to the controller using a standard LAN cable.

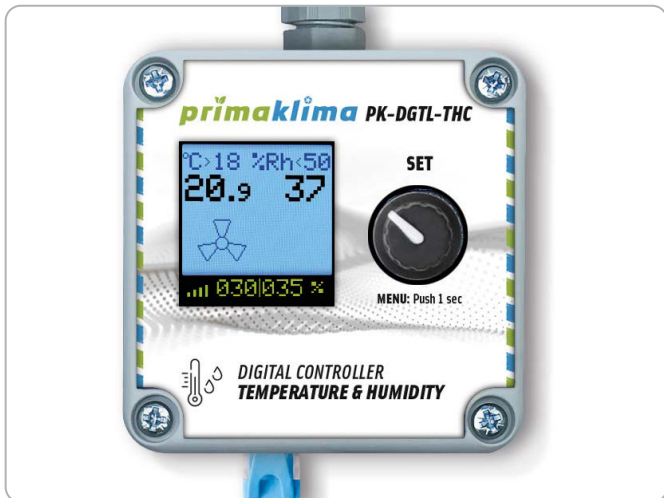

Step 2:

Press the button for >1 seconds to enter the menu.

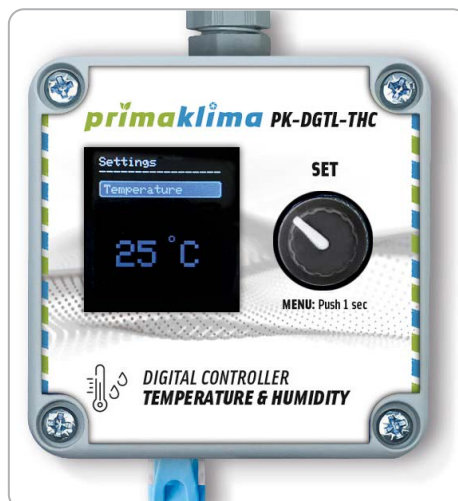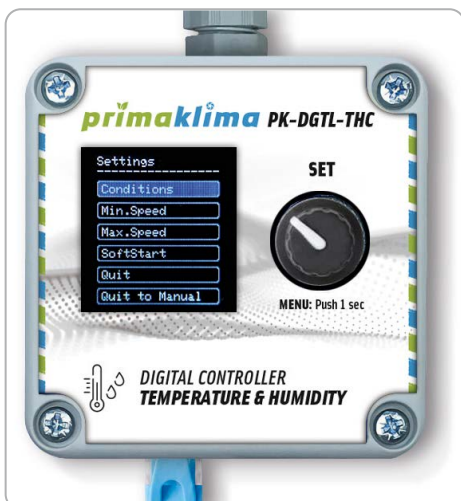


Step 3:

Turn the button until you reach the **Conditions** menu, then select **Temperature**. Briefly press the button to activate the setting mode.


You can now set the desired temperature by turning the button.

Setting Up the Display Controller Correctly

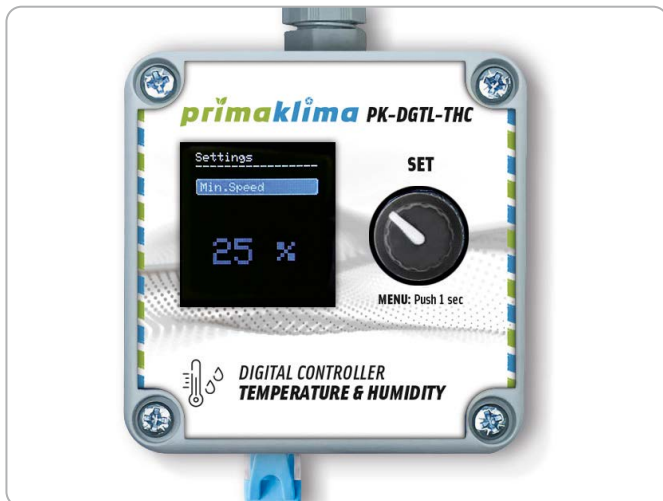


Step 4:

Press the button and go to the **Min. Speed** menu. Briefly press the button again and set the Min Speed by turning, e.g. to 20%.

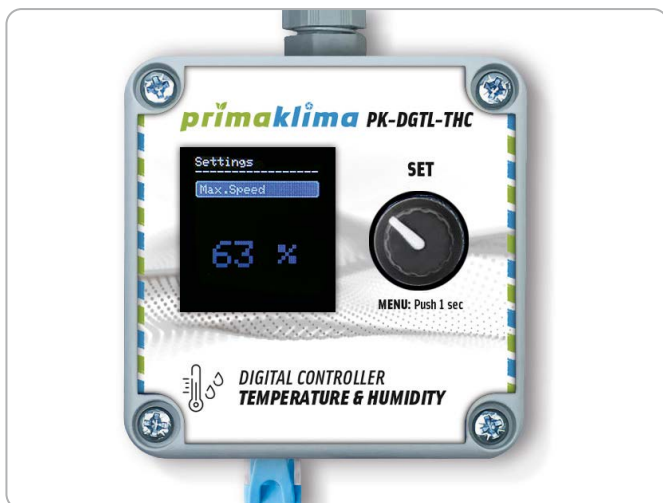


Step 5:

Press the button and go to the **Max. Speed** menu. Set the value to the desired maximum output of the fan, e.g. 38%.

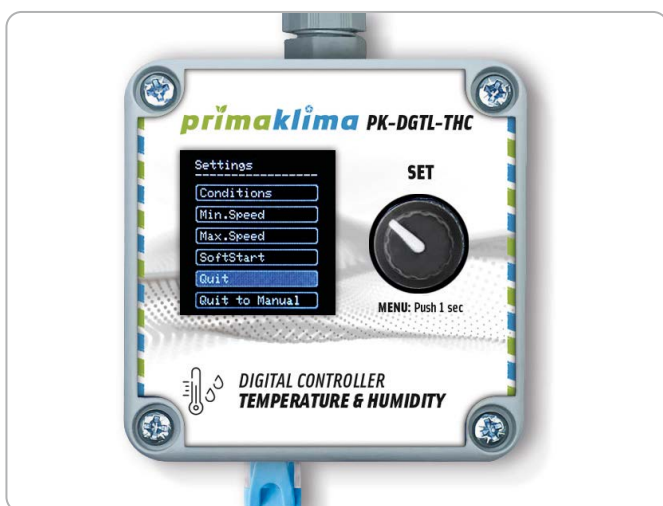


Step 6:

Press the button and go to the **Quit** menu to save and activate the programme by pressing the button.

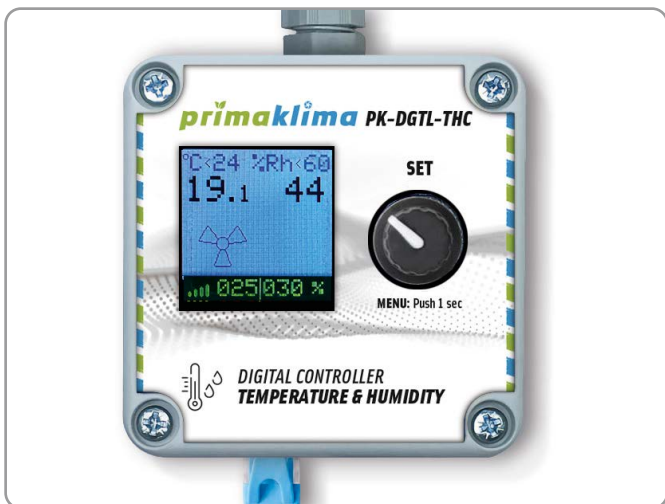

Step 7:

The control system is now active and the fan will start operating. When the set temperature is reached, the fan automatically adjusts to the set Max Speed value. This means that the increased airflow creates a cooling effect. If the temperature falls below the set value, the fan reduces back to the Min. Speed value.

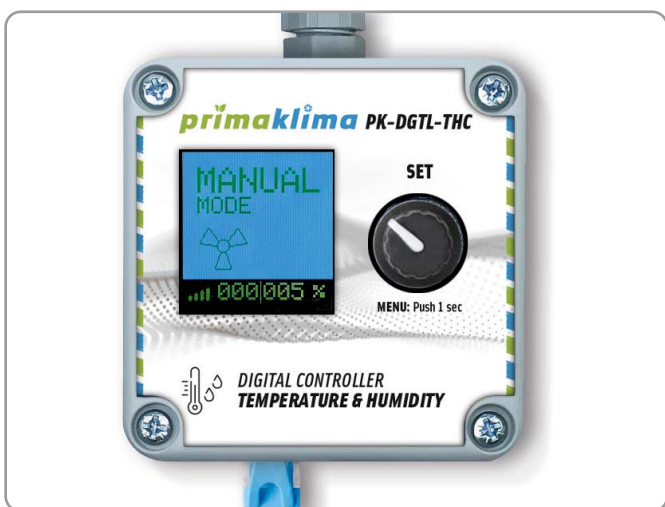

Step 8:

In the **Quit to Manual** menu, the fan can be controlled manually via the controller without temperature control.

©PrimaKlima. Errors and omissions excepted. Illustrations similar. All rights reserved.

PRIMA KLIMA TRADING CZ, s.r.o.
Záměstí 594
338 28 Radnice
Tšechien

Web
www.primaklima.com
instagram.com/prima_klima
youtube.com/c/primaklima-horticulture

E-Mail
sales@primaklima.com
Telefon
+420 371 795 340

01.05.2026

primaklima