

Ensure the silicon is sitting parallel on the hole below it. Hold at eye level to check the position is correct

### Ensuring that the AQUAvalve floods and drains correctly

- 1** Making sure your AQUAvalve floods and drains correctly is simply achieved and only takes a few seconds.
- 2** Hold the AQUAvalve at eye level so that you can see the silicon fitted to the top float resting on the hole below it.
- 3** The silicon must create a tight seal when touching the hole.
- 4** If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicon, drop the float and hold at eye level again. Repeat the procedure if necessary.

### Care and maintenance

- 1** At the end of your growing season, clean the AQUAvalve using warm soapy water. Using an old tooth brush will help.  
  
The AQUAvalve is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.  
  
At this point is it advisable to remove the silicones to avoid them being lost.
- 2** It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve nozzle, this will remove any lime scale build up that may have occurred during the growing season.  
  
Blowing through the AQUAvalve nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve nozzle.  
  
**This will potentially damage the AQUAvalve beyond repair.**



## 80Pot XL system contents


- 1x 750 ltr FlexiTank (AP300/XL/80 ONLY)
- 80x 1Pot XL tray and lid
- 80x 25 ltr pot
- 80x AQUAvalve5
- 1x 16mm tank adaptor and filter
- 4x 16mm in-line tap
- 80x 9mm top hat grommet
- 40x 16 - 9mm cross connector
- 3x 16mm tee connector
- 30 metres of 16mm pipe
- 40 metres of 9mm pipe
- 80x XL root control disc

Reference: 9mm pipe - Outside  $\varnothing$  9mm/Inside  $\varnothing$  7mm      16mm pipe - Outside  $\varnothing$  16mm/Inside  $\varnothing$  13mm

## Plan views and options

### Suggested layout


System requires minimum  
750 litre reservoir

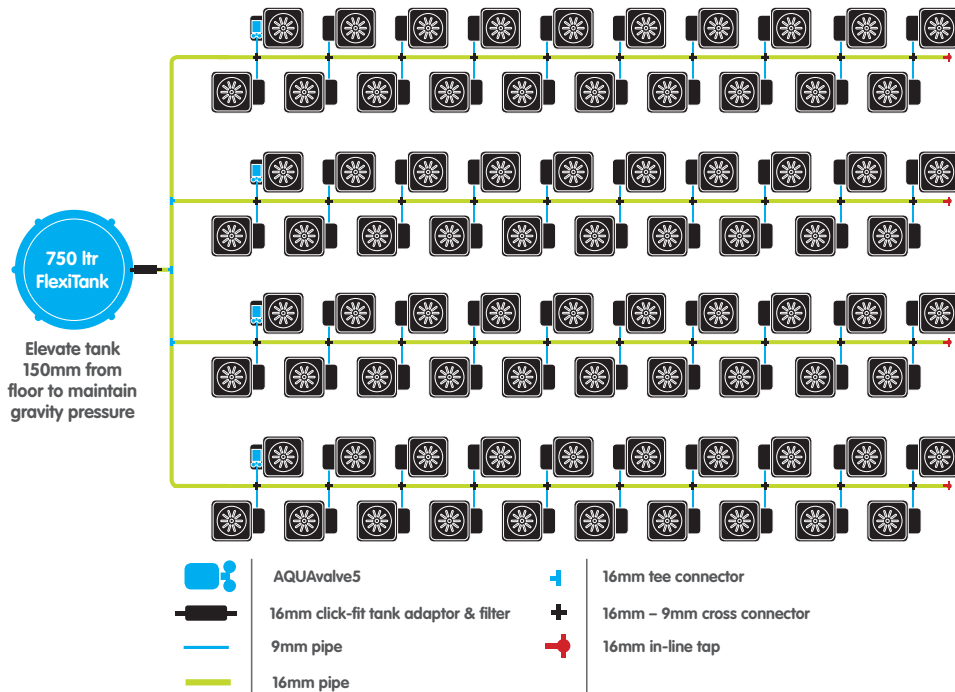

### Advice

- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 7 to 10 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir to a minimum of 150mm above the highest AQUAvalve and re-fill the reservoir when there is approximately a 1/3 of the solution left - NEVER ALLOW THE RESERVOIR TO RUN EMPTY.
- With AQUAvalve5 systems mineral or organic fertilisers may be fed via the reservoir and pipework. Organic fertilisers will require a water pump in the reservoir running for 15 mins every 2 hrs and cleaning of the reservoir, pump, and filter each time the reservoir empties. Flush pipework with plain water every time the reservoir empties.
- Clean all substrate from the bottom and sides of the pots before placing in trays to ensure AQUAvalve functionality.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

## 1Pot XL dimensions

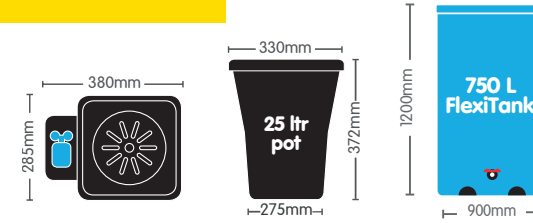

## 80Pot XL system setup instructions

- Place circular root control disc gold face down in the pot.
- Fill pot with medium and pot up plants.  
Water through pot and allow to drain outside the tray.
- From the outside of the module tray push the 9mm top hat grommet into the hole in the module tray wall.
- Wetting the pipe end will aid insertion.
- Remove AQUAvalve collar  
Push 9mm pipe through collar and attach to AQUAvalve nozzle  
Rescrew collar - **DONT overturn...** when you feel it grip **STOP**
- Remove any slack in the 9mm pipe by drawing excess out of the tray.
- Align the 'half moon' section on the rear of the AQUAvalve with the 'T' section in the tray.  
Firmly push the AQUAvalve onto the 'T'.
- Cut 9mm/16mm pipe to appropriate length
- According to the size of your system connect your 9mm/16mm pipe to relevant fitting or tank...
- Position tray so it is level  
Place pot in the tray, make sure it is **CLEAN!**  
Place lid over valve onto tray

Using your front instruction sheet, repeat the module set up instructions for the number of trays.

**Allow your plants to establish for 7-10 days before turning system on**

### Advice

If you require any guidance email - mail@autopot.co.uk